# 

# Gryphon™ I GM41XX Setup Instructions

## Linking the Reader to a Base Station

#### **RF Devices**

GB USA

For RF devices, before configuring the interface it is necessary to link the handheld with the base.

To link the handheld and the base, press the trigger to wake it and place it on the base. If the reader was previously linked to another base, you must first scan the Unlink action command before re-linking to the new base.



### **Country Mode**

This feature specifies the country/language supported by the keyboard. Only the following interfaces support ALL Country Modes.

- USB Keyboard (without alternate key encoding)
- AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 w/Std Key Encoding
- Keyboard Wedge for IBM AT PS2 with standard key encoding but without external keyboard
- AT, PS/2 25-286, 30-286, 50, 50Z, 60, 70, 80, 90 & 95 without Alternate Key
- Keyboard Wedge for IBM AT PS2 without alternate key encoding but without external keyboard


All other interfaces support ONLY the following Country Modes: U.S., Belgium, Britain, France, Germany, Italy, Spain, Sweden.

#### **Country Mode Selection**

To select a Country Mode:

- 1. Scan the ENTER/EXIT barcode below to enter Programming Mode.
- 2. From the opposite page, scan the desired Country Mode barcode.
- 3. Scan the ENTER/EXIT barcode again to exit Programming Mode.



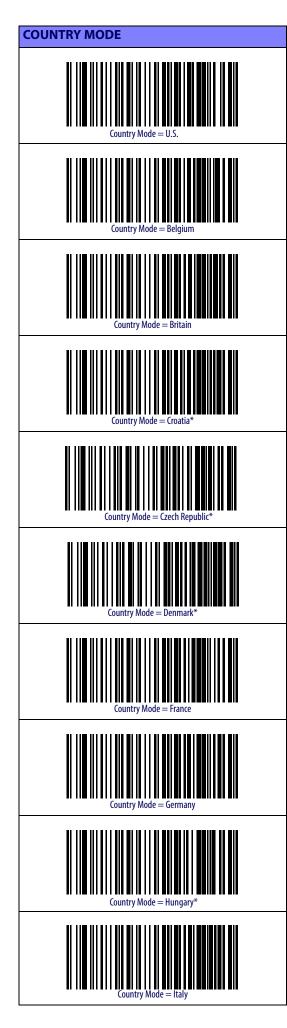

**COUNTRY MODE** Country Mode = Romania ry Mode = Slovakia\* Country Mode = Switzerland

\*Supports only the interfaces listed in the Country Mode feature description

